



CRAFTING IDEA



Twice as chic.
Black & white ridge vase.

WWW.RAYHER.COM



Used items:

36 150 000 Casting mould U-shaped vase, ridged 1 piece

Vase 1 (white below, black above)

36 990 00 Casting powder Raysin 200 150 g

34 479 576 Casting powder Raysin 250, black 100 g

Vase 2 (black below, white above)

36 990 00 Casting powder Raysin 200 100 g

34 479 576 Casting powder Raysin 250, black 150 g

Additionally you need:

Water, mixing vessel, funnel

Sandpaper if necessary




Instructions:

Vase 1 (white below, black above)

- 1 In the first place, mix the black casting powder Raysin with water as per instructions.
- 2 Pour half of the mixture into one side of the U-shape using a funnel. Take care that the hole-inlay remains straight. Pour likewise the other half into the other side of the U-shape.
- 3 After drying of about 60 minutes, stir the white casting powder Raysin. Fill the mould with the resulting white Raysin mixture.
- 4 After another 60 minutes drying time, your artwork can be demoulded.
- 5 Allow the vase to cure thoroughly, at best overnight.

Vase 2 (black below, white above)

To make the upper part of the vase white and the lower part of the vase black, start by mixing the white Raysin. Pour in equal proportions using the funnel, let it dry and fill up with the black Raysin. Let it dry, demould and cure again.

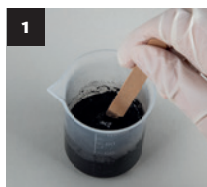

*Without drying time

Rayher.

WWW.RAYHER.COM

More craft ideas and additional material information can be found on our website.

